

# Kom igång-guide

Quick Start Guide

HUAWEI E5878



SE 3

EN 15


## Kom igång med din nya router!

### Förpackningen innehåller

- Huawei E5878, mobil 4G-router
- Usb-sladd och laddare
- Metallnål som används för att öppna luckan till sim-kortet, och även för att återställa routern till fabriksinställningar.

## 1 Sätt i sim-kortet

Öppna luckan genom att trycka in den medföljande metallnålen i det lilla hålet, sätt i sim-kortet och stäng luckan igen.




Kontrollera att du sätter kortet i rätt riktning. Använd **mikro-sim**. Spara alltid pin- och puk-kod.




## 2 Ladda

Anslut till ett eluttag eller en dator.



## 3 Starta

Håll inne knappen tills displayen tänds.

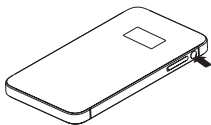

## 4 Anslut till routerns wifi

- A Gå till listan med tillgängliga trådlösa nätverk i din surfplatta/dator/mobil. (Om du behöver hjälp se sida 10).
- B Välj ditt wifi, skriv in lösenordet och klicka ok/anslut. Du hittar ditt wifi's **namn (SSID)** och **lösenord (PWD)** genom att trycka flera gånger på routerns knapp tills det visas i displayen. (Läs mer om hur du ändrar SSID och PWD på sida 12).
- C Klart, nu kan du börja surfa!

Om sim-kortets pinkod är aktiverad öppnas en sida när du startar din webbläsare där du kan ange koden. Om du behöver ange administratörs-användarnamn så är det "admin".

## En knapp - flera funktioner

På routerns högersida finns en knapp, såhär använder du den:

**Håll inne knappen** tills displayen tänds för att starta routern. Håll inne knappen tills displayen släcks för att stänga av.

**Tryck på knappen** en eller flera gånger för att se information i displayen:

SSID	Namnet på routerns wifi
PWD	(password) Lösenordet till routerns wifi
IP	Routerns IP-adress, adressen till routerns administrationssida
VER	Versionsnummer
IMEI	Routerns IMEI-nummer
S/N	Serienummer

Informationen finns även på klistermärket som följer med i förpackningen.

## Full koll med Huawei's app!

Med appen HUAWEI HiLink (Mobile Wifi) kan du bland annat hålla koll på din routers batteritid, förbrukad surfmängd, ändra lösenord, se anslutna enheter, läsa och skicka sms.

Hämta appen gratis via App Store, Google Play eller QR-kod:

Apple




Android




Appen är på engelska och skapad av Huawei.

**Tips!** Om din surfmängd tar slut skickar vi ett sms till din router. Du kan enkelt köpa mer surf genom att skicka ett sms från appen. Sms:a "1GB" till 4466 för att köpa 1 GB extra surf. Det finns även andra surfmängder att välja bland, för mer information gå till [www.telia.se/kopextrasurf](http://www.telia.se/kopextrasurf)

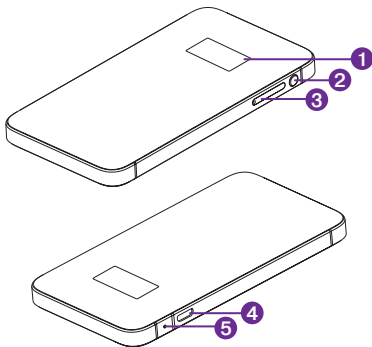

## Huawei mobil 4G-router

- 1 Display
- 2 Knapp
- 3 Lucka för micro-sim
- 4 Usb-port  
För micro-usb
- 5 Återställningsknapp

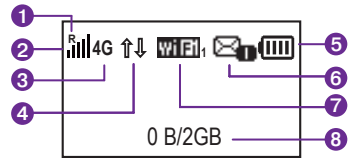

## Display

- 1 R: Dataroaming är på
- 2 Signalstyrka
- 3 Nät som används  
4G, 3G, 2G eller (wifi)
- 4 Status för internetanslutning
- 5 Batterinivå
- 6 Antal olästa sms
- 7 Wifi är på  
Antal (1) anslutna enheter
- 8 Aktuell förbrukad/total surfmängd

## ! Tips

### Se dina tillgängliga trådlösa nätverk:

- Mac-dator: Klicka på datorns wifi-ikon (AirPort) längst upp till höger.
- Windows Vista/7-dator: Klicka på datorns nätverksikon i aktivitetsfältet längst ner till höger.
- Windows 8-dator: Gå till **inställningar** i högermenyn eller genom att ankända Windows-tangenten och C, klicka sedan på **nätverk**.
- iPhone eller iPad: Välj **inställningar**, sen **wifi** och sedan **aktivera wifi**.
- Smartphone/surfplatta (Android/Windows): Välj **inställningar**, **trådlöst**, **nätverk**, sedan **wifi-inställningar**.

## ? Problemlösning

### Om du är ansluten till routern, men inte kan ansluta till internet:

- Kolla först om pinkoden för ditt makort är aktiverad genom att gå till administrationssidan (se sida 12) och ange koden när den efterfrågas. Där kan du även inaktivera koden så att du slipper fylla i den varje gång.
- Se till att funktionen för trådlöst nätverk är aktiverad på din surfplatta/dator/mobil, och att den stödjer WPA/WPA2.

- Se till att du har täckning för mobilt bredband.
- Se till att den surfplatta/dator/mobil du vill använda inte står för långt ifrån routern.
- Dubbelkolla att du försöker ansluta till rätt nätverk (SSID) och att du skriver in rätt lösenord (PWD).

### Om du inte kan ansluta till routern:

- Prova att stänga av routern och starta den igen. Starta sedan om din surfplatta/dator/mobil också.
- Om ovanstående inte hjälper, prova att ansluta routern till din dator via usb-kabeln. Dubbelklicka på ikonen som dyker upp på dataskärmen och följ installationsguiden. För att surfa trådlöst med routern kan du behöva uppdatera din dator.

### Om du upplever att du inte får bästa möjliga hastighet:

- För att få bästa täckning för routerns wifi, placera den nära ett fönster.
- För högre hastighet, placera routern nära ansluten surfplatta/dator/mobil.
- Hastigheten kan bli långsammare om många anslutna surfar samtidigt.
- Anslutning till routern via usb kan ge dig ännu högre hastighet än via wifi.

## Administrationssida

Din router har en administrationssida där du kan göra mer avancerade inställningar, och läsa och skicka sms.

I administrationen kan du byta wifi-namn (SSID) och lösenord (PWD) med mera. Du kan även se en mer utförlig manual genom att klicka på [hjälp](#).

- Du hittar administrationen på webbadressen <http://192.168.8.1>  
Användarnamn och lösenord är "admin".

### Om anslutningen hoppar mellan olika nät (4G, 3G och 2G)

I administrationen kan du låsa routern till ett önskat nätverk.

- Gå till [inställningar](#), välj sedan [fjärranslutning](#), sedan [nätverksinställningar](#). Under nätverk, välj det nät du vill låsa till. Klicka på [verkställ](#).

### Uppdatera routerns mjukvara

- I administrationen kan du gå till [uppdatera](#) för att se om det finns nya uppdateringar att ladda ner. Om så är fallet, följ instruktionerna på skärmen.

### Om du av någon anledning behöver återställa routern

- Återställ din router till fabriksinställningar med återställningsknappen. Använd den medföljande metallnålen och tryck in knappen tills dess att Huawei-logon syns i displayen. Då försvinner alla inställningar och ändringar som du gjort i administrationen.

## ! Säkerhet

- Utsätt inte routern för extremt höga eller låga temperaturer, vatten eller fuktighet.
- Försök inte att demontera routern. Bara kvalificerad personal får utföra underhåll.
- Använd inte routern nära starka elektriska eller magnetiska fält, t.ex. mikrovågsugnar.
- Använd inte routern där trådlösa enheter är förbjudna, som t.ex. på flygplan eller sjukhus.
- Placera den inte intill en pacemaker i jackficka eller kavaj.

## Quick start your new router!


### The package contains

- Huawei E5878, 4G mobile router
- Usb cord and charger
- Metal needle for opening the sim card tray, and for pressing the reset button.



## 1 Insert sim card

Press the metal needle into the small hole to open the card tray. Insert your sim card and push the tray back in place.




Make sure you insert the card in the right direction. Use **micro sim**. Save your pin and puk code.




## 2 Charge

Plug into a socket or computer.



## 3 Start

Hold the button until the screen lights up.

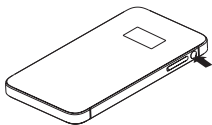

## 4 Connect

- A Go to the list of wireless networks in your tablet/computer/mobile. (If you need help, see page 22).
- B Select your wifi, enter the password and click ok/connect. Your **wifi name** (SSID) and **password** (PWD) will show on the screen of your router if you click the button several times. (You can change your SSID and PWD, read more on page 24).
- C Start surfing!

If the pin code of your sim card is activated, a page will open when you start your browser, where you can enter your pin code. If you need to enter your administrator username it is "admin".

## One button - many functions

**There is a button on the right side of your router. This is how you use it:**

**Hold the button** until the screen lights up to turn on the router. Turn off by holding the button until the screen turns off.

**Press the button** one or several times to display information on the screen:

SSID	Router wifi name
PWD	Router wifi password
IP	Router IP Address, address to the router administration page
VER	Version number
IMEI	Router IMEI number
S / N	Serial number

You can also find this information on the sticker included in the package.

## Download the Huawei app!

With the HUAWEI HiLink (Mobile Wifi) app you can keep track of your router's battery level, current used data and data limit, change passwords, see connected devices, read and send text messages.

Download the app for free in App Store, Google Play or via QR code:


Apple



Android




**Tip!** If you reach your surf data limit we send a text message to your router. You can easily top-up your data amount by sending a text message from the app. Just text "1GB" to **4466** to buy 1GB of extra surf. There are also other data amounts to choose from, for more information go to [www.telia.se/kopextrasurf](http://www.telia.se/kopextrasurf)

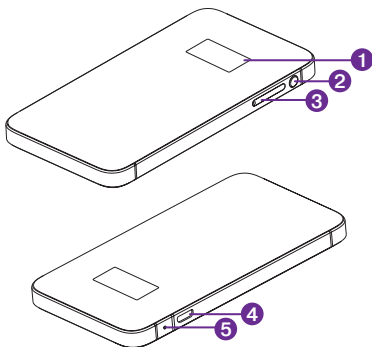

## Huawei mobile 4G router

- ① Screen
- ② Button
- ③ Card tray for micro-sim
- ④ Usb port  
For micro-usb
- ⑤ Reset button

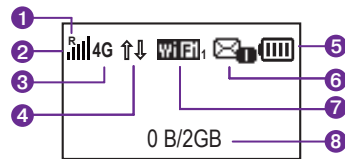

## Screen

- ① R: Data roaming turned on
- ② Signal strength
- ③ Network type  
4G, 3G, 2G or (wifi)
- ④ Data connection status
- ⑤ Battery level
- ⑥ Number of new text messages
- ⑦ Wifi turned on  
(1) Number of connected devices
- ⑧ Current data usage/limit

## ? Problem solving

### How to view your wireless networks:

- Mac computer: Click on the wifi icon (airport) at the top right.
- Windows Vista/7 computer: Click on the network icon on the task bar at the bottom right.
- Windows 8 computer: Go to **settings** in the right menu, or by using the Windows key and C, click **network**.
- iPhone or iPad: Choose **settings**, then **wifi** and **enable wifi**.
- Smartphone or tablet (Android/Windows), choose **preferences**, **wireless**, **network**, and **wifi settings**.

### If you are connected to the router but unable to connect to the internet:

- Check if the pin code for your sim card is active, by going to the router administration page (see page 24) and enter your pin code when prompted. Here you can also disable the pin verification to avoid having to enter the code every time.
- Make sure the wireless network function is enabled on your tablet/computer/mobile, and that it supports WPA/WPA2.
- Make sure you have reception for mobile broadband.

- Make sure the tablet/computer/mobile that you want to use is not placed too far from the router.
- Double check that you are trying to connect to the correct wifi (SSID) and that you enter the correct password (PWD).

### If you can't connect to the router:

- Try turning the router off, and start it again. Then restart your tablet/computer/mobile too.
- If that does not help, try to connect the router to your computer via usb cable. Double-click the icon that appears on the computer screen and follow the installation wizard. For wireless surf, you may need to update your computer.

### If you feel that you are not getting the best possible surf speed:

- To get the best reception for your router wifi, place it near a window.
- To get the best surf speed, place the router near your connected tablet/computer/mobile.
- Wifi can be slower if many connected users are surfing at the same time.
- When you connect to the router via usb you can achieve even better surf speed than via wireless wifi.

## Administration page

Your router has an administration page where you can manage advanced settings, and read and send text messages.

You can for example change your wifi name (SSID) and password (PWD). You can also see a more detailed manual by clicking [help](#).

- You find the administration page by going to the web address <http://192.168.8.1>  
User name and password is "admin".

### If the connection jumps between different networks (4G, 3G and 2G)

You can lock your router to a preferred network in the administration.

- Go to [settings](#), select [remote connection](#), then [network settings](#). Under network, select the network you prefer, and [apply](#).

### Updating router software (firmware)

- In the administration, go to [update](#) to see if there are new updates to download. If so, follow the instructions on the screen.

### If for any reason you need to reset the router

- Reset your router to factory settings with the reset button. Use the metal needle and push the button until the Huawei logo appears on the screen. This clears all settings and changes you have made in the administration.

## ! Safety

- Do not expose the router to water, moisture, extremely high or low temperatures.
- Do not attempt to disassemble the router. Only qualified personnel should conduct maintenance.
- Do not use the router near strong electric or magnetic fields, such as microwave ovens.
- Do not use the router where wireless devices are prohibited, such as on airplanes or hospitals.
- Do not place it next to a pacemaker in jacket pocket.

TSP-4075\_2 - 1412

